



enTourage Pocket eDGe Battery Replacement

This guide will aid the reader in replacing the battery on their Entourage Pocket eDGe.

Written By: Adrian Do



INTRODUCTION

The enTourage Pocket eDGe may experience battery failure. If you need to replace the battery of your enTourage Pocket eDGe for any reason, follow this guide.



TOOLS:

 
- [Screwdriver](#) (1)
- [JIS #1](#) (1)
- [iFixit Opening Tools](#) (1)




PARTS:

- [Replacement Battery for Entourage Pocket eDGe](#) (1)

Step 1 — Battery

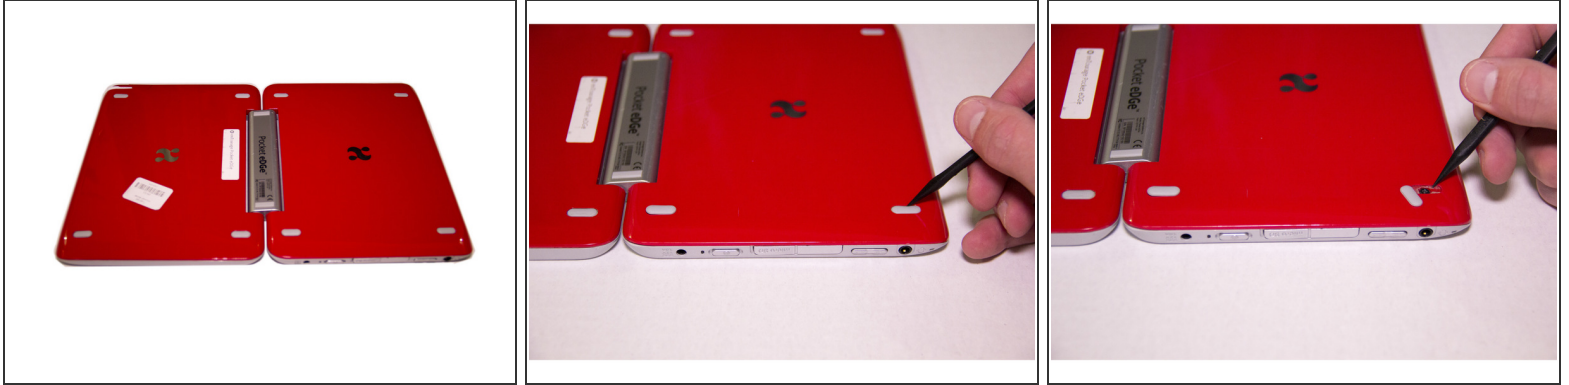

 Make sure the device is powered off before beginning.

 
- Open the Pocket Edge and place device with the screens face down. The side containing the stylus should be on the left.
- Remove all eight elliptical rubber tabs covering screws using your finger or spudger.

Step 2



- Using your J1 Phillips head screwdriver, remove all eight 6mm screws from the back of your device.

Step 3

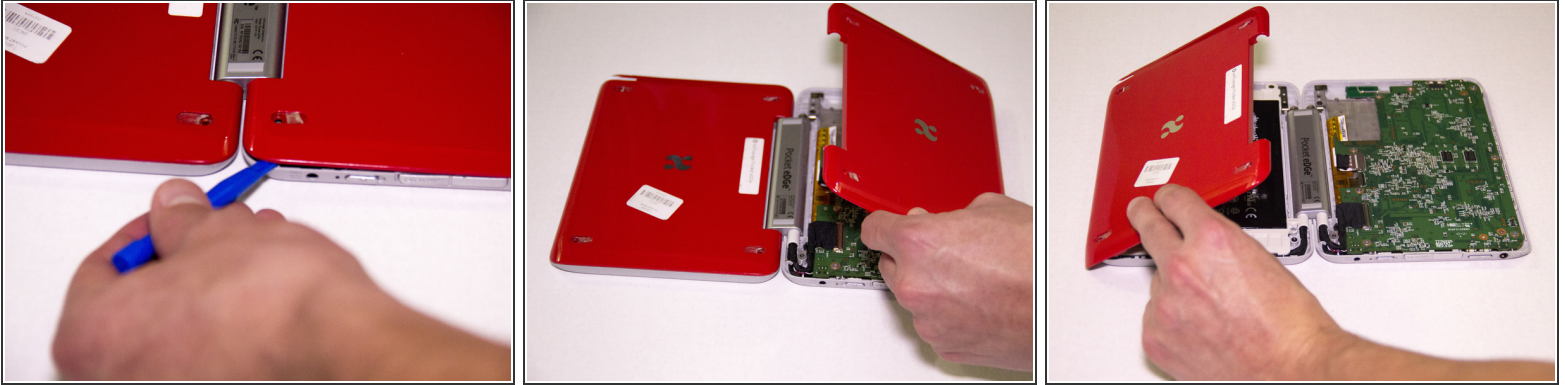


- Using the plastic opening tool, lift the back plate from both sides of your device and remove them.

Step 4



- Locate the side containing the battery. Lift the top of the battery out using your finger and the indentation at the top.

 Step 5

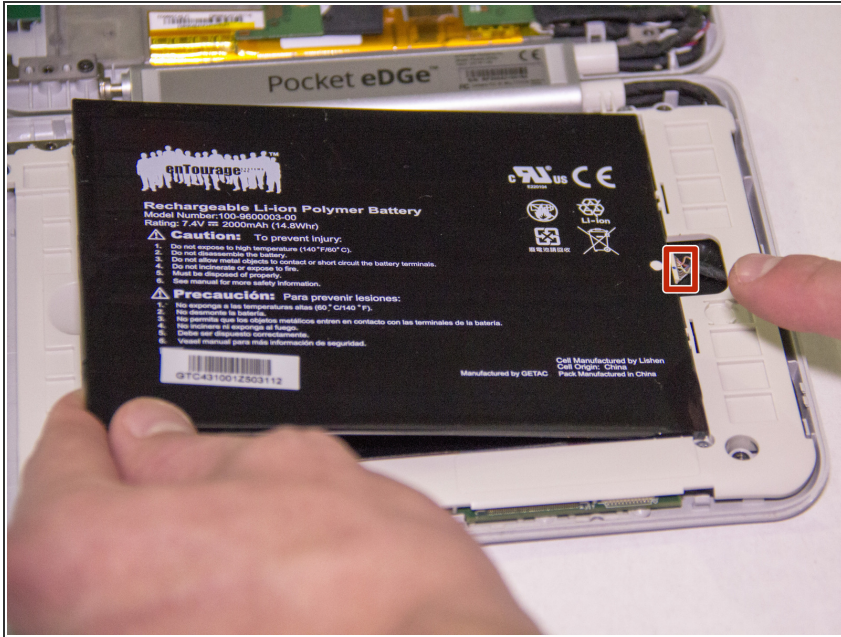

- Carefully unplug the bottom side of the battery from the connecting plug and set the disconnected battery aside.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 03:49:43 PM.